


PLACE ALONG EDGE OF CHROME WINDSHIELD MOULDING

NOTE:


WHEN MOUNTING BRACKET  
INSERT THE UPPER SCREW FIRST.

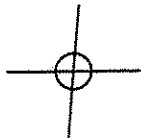

PLACE EVEN WITH BOTTOM END OF "A" PILLAR

POST  
INSTALLATION

# 2239

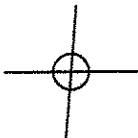

PLACE ALONG EDGE OF "A" PILLAR CHROME MOULDING DOOR SIDE